



For product questions contact:  
Sunbeam Consumer Service

USA : 1.800.334.0759  
Canada : 1.800.667.8623  
[www.oster.com](http://www.oster.com)

©2004 Sunbeam Products, Inc. All rights reserved.

OSTER® is a registered trademark of Sunbeam Products, Inc.

COOL-TOUCH™ is a trademark of Sunbeam Products, Inc.

In the U.S., distributed by Sunbeam Products, Inc., Boca Raton, FL 33431

In Canada, imported and distributed by Sunbeam Corporation, Limited.

Pour les questions de produit:  
Sunbeam Consumer Service

États-Unis : 1.800.334.0759  
Canada : 1.800.667.8623  
[www.oster.com](http://www.oster.com)

©2004 Sunbeam Products, Inc. Tous droits réservés.

OSTER® est une marque déposée de Sunbeam Products, Inc.

COOL-TOUCH™ est une marque de commerce de Sunbeam Products, Inc.

Aux États-Unis, distribué par Sunbeam Products, Inc., Boca Raton, Florida 33431

Au Canada, importé et distribué par Sunbeam Corporation, Limited.

Para preguntas sobre los productos llama:  
Sunbeam Consumer Service

EE.UU. : 1.800.334.0759  
Canadá : 1.800.667.8623  
[www.oster.com](http://www.oster.com)

©2004 Sunbeam Products, Inc. Todos los derechos reservados.

OSTER® es una marca registrada de Sunbeam Products, Inc.

COOL-TOUCH™ es una marca comercial de Sunbeam Products, Inc.

En los EE. UU., distribuido por Sunbeam Products, Inc., Boca Raton, FL 33431

En Canadá, importado y distribuido por Sunbeam Corporation, Limited.



User Manual **6-Slice Toaster Oven**

Manual de Instrucciones **Horno Tostador para 6 Rebanadas**

Manuel d'Instructions **Grille-Pain Four à 6 Tranches**

**MODELS/MODÈLES 6230, 6232, 6233, 6234, 6236, 6237, 6238,**  
**MODELOS 6260, 6261, 6262, 6265, 6268, 6269, 6270**



Visit us at [www.oster.com](http://www.oster.com)

P.N. 111360

# IMPORTANT SAFEGUARDS

## SAVE AND READ THESE INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed including the following:

- **READ ALL INSTRUCTIONS, PRODUCT LABELS AND WARNINGS BEFORE USING THE TOASTER OVEN.**
- Do not touch hot surfaces. Always use oven mitts when handling hot materials and allow metal parts to cool before cleaning. Allow the unit to cool thoroughly before putting in or taking off parts. Always use the oven handles when moving the unit.
- When the unit is not in use and before cleaning, unplug the toaster oven from the wall outlet. **Note:** Make sure the oven is turned off before unplugging.
- To protect against risk of electrical shock, do not immerse the appliance in water or any other liquids.
- Close supervision is always necessary when this or any appliance is used near children. This appliance is not for use by children.
- Do not operate this or any appliance with a frayed or damaged cord or plug or after the appliance malfunctions or is dropped or has been damaged in any manner.
- Do not use attachments not recommended by the manufacturer; they may cause fire, electric shock or personal injury.
- Do not use outdoors or for commercial purposes.
- Do not use this appliance for other than its intended use.
- Do not let the cord dangle over the edge of a tabletop or countertop or to touch hot surfaces.
- Do not place the appliance near a hot gas or electric burner or in a heated oven.
- Extreme caution should be used when using containers constructed of other than metal or glass.
- A fire may occur if the toaster oven is covered or touching flammable materials, including curtains, draperies, walls, etc., when in operation. Do not store any items on top of the appliance when in operation.
- When using toaster oven, pull the unit out a minimum of 6 inches away from the wall or other cords.

## Safety

- Do not store any materials, other than manufacturer's recommended accessories, in this unit when not in use.
- Do not place any flammable materials in oven, such as paper, cardboard, plastic or any materials that may catch fire or melt.
- Do not cover the oven tray with metal foil. This will cause overheating of the appliance.
- Oversize foods or metal utensils must not be inserted in the appliance as they may create a fire or risk of electrical shock.
- Do not clean with metal scouring pads. Pieces can break off the pad and touch electrical parts involving a risk of electrical shock.
- When broiling, use extreme caution when removing tray or disposing of hot grease.
- To turn this appliance off, return all controls to the "OFF" position.

## THIS UNIT IS FOR HOUSEHOLD USE ONLY

### For Products Purchased in the United States and Canada Only

To reduce the risk of electrical shock, this appliance has a polarized plug (*one blade is wider than the other*). This plug fits a polarized outlet only one way; if the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. **Do not** attempt to defeat this safety feature.

# SAVE THESE INSTRUCTIONS

## Welcome

 
Congratulations on your purchase of an OSTER® Toaster Oven!

## Features of Your Toaster Oven

1. Removable/Reversible Wire Racks
2. Function Selector Knob
3. Temperature Control Knob
4. Power Light
5. Cool-Touch™ Side Handles
6. Timer Control Knob with Bell Signal
7. Removable Crumb Tray
8. Viewing Window
9. Continuous Clean Interior Walls
10. Baking Pan and Broiling Tray
11. Auto Advance Rack
12. Two Rack Positions

Models with 1 rack: 6234, 6236

Models with 2 racks: 6230, 6232, 6233, 6237  
6238, 6260, 6261, 6262,  
6265, 6268, 6269, 6270

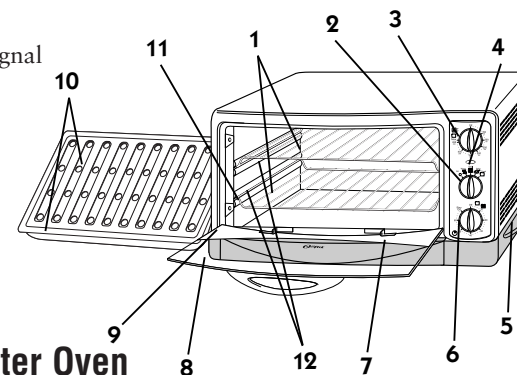

## Learning About Your Toaster Oven

### 1. Removable/Reversible Wire Racks –

To accommodate a wide variety of foods the oven has one or two reversible racks and two rack positions.

### 2. Function Selector Knob – Select cooking function by turning knob to desired setting. (See Figure 2)

### 3. Temperature Control Knob – Adjust the dial thermostat to the desired temperature. (See Figure 1)

### 4. Power Light – Indicates that oven is plugged in and that the timer is set to begin warming.

### 5. Cool-Touch™ Side Handles – For easy movement of the oven.

### 6. Timer Control Knob with Bell Signal – Set cooking time up to 60 minutes. Will automatically turn the oven OFF at the end of the cooking time. (See Figure 3)

### 7. Removable Crumb Tray – For crumb or fallen food particles collection. Pulls out for easy cleaning.

### 8. Viewing Window – Allows you to see food cooking.

### 9. Continuous Clean Interior Walls – Allows for easy cleaning.

### 10. Baking Pan and Broiling Tray – Use for all your baking, broiling and grilling needs.

### 11. Cord Storage Bracket – Brackets located on the back of the unit allow for convenient cord storage. (See Figure 4)

### 12. Power Cord

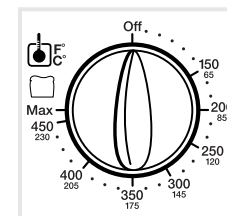 


FIGURE 1

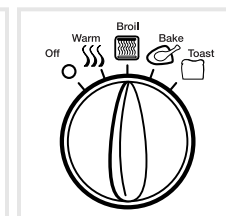 


FIGURE 2

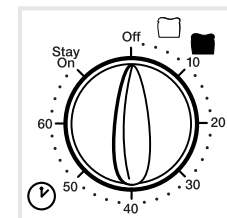 


FIGURE 3

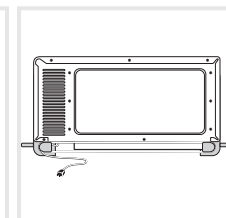 


FIGURE 4

## Preparing To Use Your Toaster Oven for the First Time

If you are using your toaster oven for the first time, please be sure to:

Remove any stickers from the surface of the oven.

Open oven door and remove all printed documents and paper from inside the toaster oven.

Clean the racks, tray, and pan with hot water, a small amount of dishwashing liquid and a non-abrasive sponge or cleaning pad. Insert bottom rack over hooks on glass door so rack moves with door.

**DO NOT IMMERSE THE BODY OF THE UNIT IN WATER.**

Dry the unit thoroughly before using.

Select a location for the toaster oven. The location should be in an open area on a flat counter where the plug will reach an outlet.

Plug the toaster oven into a 120 Volt AC electrical outlet.

**WARNING:** When toaster oven is in use or cooling down, please be sure there is a 4-inch clearance between the toaster oven and any other surface including cords. Be sure the cord is not resting against the back of the toaster oven.

## Using Your Toaster Oven

### Preheating the Oven

Place oven racks into the desired position before heating the oven.

(See “Positioning Racks” Section)

Turn the temperature control knob to the desired temperature.

Turn the function selector knob to the desired setting.

Set the timer knob to desired time and allow 9 – 11 minutes for the oven to preheat.

## To Use the Warm Function

**NOTE:** The warm function is for warming and keeping food warm after heating.

Select desired oven rack position. (See “Positioning Racks” Section)

Turn the temperature control knob to the desired temperature.

Turn the function selector knob to the WARM setting. Only the top heater element will operate. The heater elements will cycle ON and OFF to maintain temperature.

Turn the timer knob to the desired time. The timer can be set for up to 60 minutes.

At the end of the cooking time a bell signal sounds and the oven turns off automatically.

To set the timer for less than 15 minutes, turn the timer past the 15-minute mark to engage timer switch; it can be set for cooking that will only require a few minutes.

Arrange food on the wire rack or in the baking pan.

When warming is completed, open door fully and remove food carefully.

**WARNING:** Cooked food can be very hot, especially pastry fillings. Handle with care.

## To Use the Variable Broil Function

\*Select desired oven rack position. (See “Positioning Racks” Section)

Close the door to the first notch, leaving approximately a 3-inch gap at the top.

This will insure adequate airflow during broiling.

Turn the temperature control knob to the desired temperature.

Turn the function selector knob to the BROIL setting. Only the top heater element will operate.

Turn the timer knob to the desired time. The timer can be set to STAY ON or for up to 60 minutes. At the end of the cooking time a bell signal sounds and the oven turns off automatically. To set the timer for less than 15 minutes, turn the timer past the 15-minute mark to engage timer switch; it can be set for cooking that will only require a few minutes.

Place broil rack in oven pan to make broiler pan.

Arrange food on broiler pan.

Place broiler pan on oven rack.

Turn food over about halfway through the broiling time.

When broiling is completed, open door fully and remove food carefully.

## To Use the Bake Function

\*Select desired oven rack position. (See “Positioning Racks” Section)

Turn the temperature control knob to the desired temperature.

Turn the function selector knob to the BAKE setting. Both the top and bottom heater elements will operate.

Turn the timer knob to the desired time. The timer can be set to STAY ON or for up to 60 minutes. At the end of the cooking time a bell signal sounds and the oven turns off automatically. To set the timer for less than 15 minutes, turn the timer past the 15-minute mark to engage timer switch; it can be set for cooking that will only require a few minutes.

Arrange food on the wire rack or in the baking pan.

When baking is completed, open door fully and remove food carefully.

When defrosting do not preheat oven. Turn Temperature Control to 250°F. Allow 15 to 20 minutes per side for meats or fish to defrost. Always cook food promptly after thawing.

## To Use the Toast Function

\*Select desired oven rack position. (See “Positioning Racks” Section)

**NOTE –** No pre-heat period is required before toasting.

**NOTE –** Different types of bread require different settings. Lighter breads and waffles require a lighter setting. Darker breads, muffins, and English muffins require a darker setting.

Turn the temperature control knob to the MAX temperature.

Turn the function selector knob to the TOAST setting. Both the top and bottom heater elements will operate.

Turn the timer knob to the desired Toast setting. To set the timer, turn the timer past the 15 minute mark to engage timer switch and set back to desired toast setting.

Arrange food on the wire rack.

When toasting is completed, open door fully and remove food carefully.

**NOTE –** The top heating elements will cycle ON and OFF to maintain the desired temperature.

**TIP –** For best toasting results, position the rack in the up position on the lower rack guide. (See “Positioning Racks” Section)

**WARNING:** Cooked food can be very hot, especially pastry fillings. Handle with care.

## Positioning Racks

To accommodate a wide variety of foods the oven has two reversible racks and two rack positions. The racks can be inserted in the oven in the up position or down position. The racks will fit into either of the rack guides inside of the toaster oven. (See Figure 5)

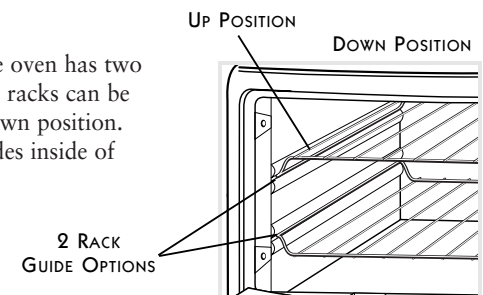 


FIGURE 5

Before removing the racks allow the unit to cool.

To remove a rack, open the oven door and pull the rack towards the front of the oven. The rack will slide on the rack guides on the inside of the oven.

Positioning of the rack will depend on the size of the food and desired browning.

**NOTE** – Lower rack will not auto advance unless the rack is inside hooks on the glass door.

**TIPS:**

Adjust rack downward to prevent top browning and upward to prevent bottom burning.

\*For best toasting results, position the rack in the up position on the lower rack guide.

\*When broiling, position the rack in the up position on the upper rack guide.

To replace the rack in the oven, align rack in rack guide and slide toward the back of the oven.

Cleaning Your Toaster Oven

Before cleaning your OSTER® Toaster Oven, unplug it and allow it to cool. To clean, wipe with damp cloth. **DO NOT IMMERSE IN WATER!** Make sure to use only mild, soapy water. Abrasive cleaners, scrubbing brushes and chemical cleaners will damage the continuous clean coating on this unit. Empty crumb tray frequently to avoid accumulation of crumbs. Toaster oven racks are dishwasher safe (*top of dishwasher only*).

Storing Your Toaster Oven

Allow the appliance to cool completely before storing. If storing the toaster oven for long periods of time make certain that the toaster oven is clean and free of food particles. Store the toaster oven in a dry location such as on a table or countertop or in a cupboard shelf. Wind the electrical cord around the cord storage brackets. Other than the recommended cleaning, no further user maintenance should be necessary.

HELPFUL TIPS / TROUBLESHOOTING		
PROBLEM	POTENTIAL CAUSE	SOLUTION
• Overcooked / Undercooked Foods	• Incorrect temperature or time setting  • Rack placement	• You may have to adjust the time and temperature to desired taste. • Because your toaster oven is smaller than your regular oven, it will heat up faster and generally cook in shorter periods of time. • Refer to “Positioning Racks” Section, Page English-4. Racks may need to be adjusted to accommodate food type.
• Burnt Smell	• Food build-up inside oven, on heating elements or in crumb tray.	• Refer to “Cleaning Your Toaster Oven” Section, Page English-5.
• Oven does not turn ON	• Unit is unplugged	• Plug the toaster oven into a 120-volt AC electrical outlet. • Set timer knob and temperature knob to desired setting. Both must be turned on to operate the toaster oven.
• Only one heating element is heating up	• Function setting selection determines which heating element will operate.	• When toasting, make sure the oven is not set to broil setting.
• Heating elements do not stay ON	• Heating elements will cycle ON and OFF to maintain proper heat.	• Be certain that function is as desired.

One-Year Limited Warranty

Sunbeam Products, Inc., or if in Canada, Sunbeam Corporation (Canada) Limited (collectively “Sunbeam”) warrants that for a period of one year from the date of purchase, this product will be free from defects in material and workmanship. Sunbeam, at its option, will repair or replace this product or any component of the product found to be defective during the warranty period. Replacement will be made with a new or remanufactured product or component. If the product is no longer available, replacement may be made with a similar product of equal or greater value. This is your exclusive warranty.

This warranty is valid for the original retail purchaser from the date of initial retail purchase and is not transferable. Keep the original sales receipt. Proof of purchase is required to obtain warranty performance. Sunbeam dealers, service centers, or retail stores selling Sunbeam products do not have the right to alter, modify or any way change the terms and conditions of this warranty.

This warranty does not cover normal wear of parts or damage resulting from any of the following: negligent use or misuse of the product, use on improper voltage or current, use contrary to the operating instructions, disassembly, repair or alteration by anyone other than Sunbeam or an authorized Sunbeam service center. Further, the warranty does not cover: Acts of God, such as fire, flood, hurricanes and tornadoes.

What Are the Limits on Sunbeam’s Liability?

Sunbeam shall not be liable for any incidental or consequential damages caused by the breach of any express, implied or statutory warranty or condition.

Except to the extent prohibited by applicable law, any implied warranty or condition of merchantability or fitness for a particular purpose is limited in duration to the duration of the above warranty.

Sunbeam disclaims all other warranties, conditions or representations, express, implied, statutory or otherwise.

Sunbeam shall not be liable for any damages of any kind resulting from the purchase, use or misuse of, or inability to use the product including incidental, special, consequential or similar damages or loss of profits, or for any breach of contract, fundamental or otherwise, or for any claim brought against purchaser by any other party.

Some provinces, states or jurisdictions do not allow the exclusion or limitation of incidental or consequential damages or limitations on how long an implied warranty lasts, so the above limitations or exclusion may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights that vary from province to province, state to state or jurisdiction to jurisdiction.

How To Obtain Warranty Service

In the U.S.A. –  
If you have any question regarding this warranty or would like to obtain warranty service, please call 1.800.334.0759 and a convenient service center address will be provided to you.

In Canada –  
If you have any question regarding this warranty or would like to obtain warranty service, please call 1.800.667.8623 and a convenient service center address will be provided to you.

In the U.S.A., this warranty is offered by Sunbeam Products, Inc., located in Boca Raton, Florida 33431. In Canada, this warranty is offered by Sunbeam Corporation (Canada) Limited, located at 5975 Falbourn Street, Mississauga, Ontario L5R 3V8.

PLEASE DO NOT RETURN THIS PRODUCT TO ANY OF THESE ADDRESSES OR TO THE PLACE OF PURCHASE.